

INSTALLATION OF TWO-WAY TRAVERSE ROD

*Center Support is not needed on 28"-48" rods and is not included on that size

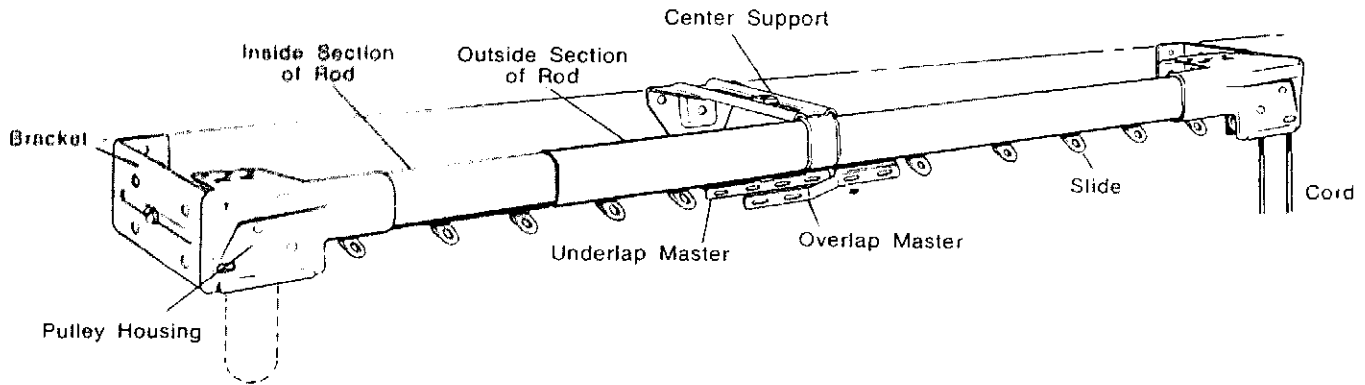


Fig. 1: ROD INSTALLED

1 MOUNT THE TWO END BRACKETS (Figs. 1 and 2) on window casing, or on wall if rod is to extend beyond window. If rod is to be mounted direct to ceiling no brackets are required. See "Special Instructions," Step 2, reverse side.

Skip steps 2 and 4 if rod, fully extended, will be less than 60" long.

2 MOUNT CENTER SUPPORTS (Figs. 1 and 2) at equal distances between brackets, aligned with top of brackets. Note supports are marked IN and OUT to indicate whether they fit INSIDE or OUTSIDE sections of rod (Fig. 1). They should be positioned accordingly. (Only two screws are necessary, inserted either in the two top outer holes, or, on narrow casings, vertically in the two center holes.)

3 INSTALL ROD IN BRACKETS (Fig. 3) by extending to desired length and pushing into brackets from the front. Spring clip "E" (Fig. 3) will automatically lock rod into place. Finger pressure on spring clip "E" will release rod.

4 SNAP ROD INTO CENTER SUPPORTS (Fig. 4) by placing bottom of rod into stirrup "D" and top of rod under "C."

5 ADJUST MASTER CARRIERS to make sure draperies center correctly. Pull draw cord to move Overlap Master Carrier (Fig. 1) as far as it will go to the right end of rod. Then, holding both cords securely, push Underlap Master Carrier (Fig. 1) as far as it will go to the left end of rod by moving it on the rod.

6 LOCK CORD by looping it under locking tongue "T" at back of Underlap Master Carrier (Fig. 5)

If Cord-Tension Pulley is to be installed, see Special Instruction No. 1 and skip Step 7.

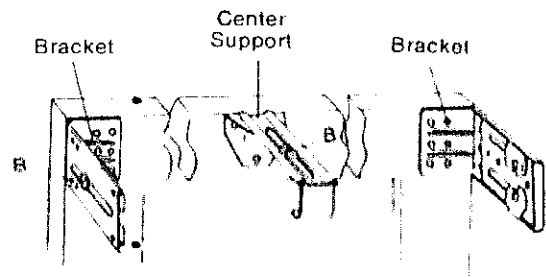


Fig. 2: MOUNTING BRACKETS AND SUPPORTS

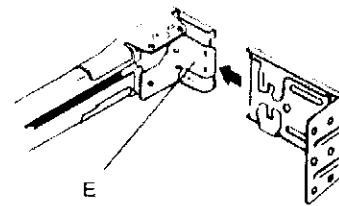


Fig. 3: INSTALLING ROD IN BRACKETS

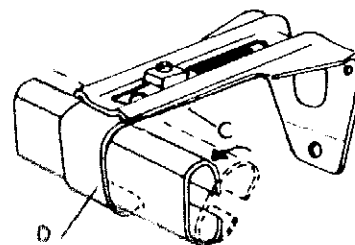


Fig. 4: INSTALLING ROD IN CENTER SUPPORTS

7 ATTACH CORD DROPS (Fig. 6) after determining position on cord as follows: Pull cord until master carriers are half-way between open and closed positions. Mark cord where you want cord tassels to be. Cut cords 1" below marks, slip cord drops on, knot cord ends, and slide cord drops down over knots as shown

8 HANG DRAPERIES. Start by hooking drapery panels at master carriers and work toward brackets being sure to use each successive slide and removing any unused slides through slide gate at end of rod (Fig. 7). Place last three drapery hooks as shown in Fig. 8 so that drapery returns neatly to wall.

Special Instructions

1 INSTALLING WITH CORD-TENSION PULLEY INSTEAD OF CORD DROPS. Attach Cord-Tension Pulley to wall, floor, baseboard, or window casing directly under draw cords. Base is hinged at "V" for either right angle or perpendicular mounting (Fig. 9). Press thumb tab in and upwards to unsnap pulley head cover. Pull head of pulley up until tabs (M) are through tube. Rotate to lock in (up) position. Slip draw cord around pulley, bend hinge and snap to close.

Next, grasp cord-joining clip "A" behind the overlap master carrier (Fig. 10) and pull out enough cord to take up slack between the rod and the cord-tension pulley. Cut off cord-joining clip and knot each cord end as close as possible to the overlap master carrier. Cut off excess cord beyond knots. Rotate pulley head until tabs (M) drop back into tube, letting tension fall on cord. Rotate pulley head, if necessary, until cords are in proper alignment and untwist.

2 CEILING INSTALLATION. If rod is to be installed to ceiling, attach pulley housings (without brackets) and stirrup portion of center support directly to ceiling as shown in Fig. 11.

3 CHANGING FROM RIGHT TO LEFT DRAW CORD. Rods are furnished with cord loop at right. They may be converted to cord loop at left without restringing simply by hooking cord out from inside left pulley housing (Fig. 1) and pulling loop all the way out.

4 ADJUSTING PROJECTION. Projection, may be adjusted, if needed, by loosening adjusting screws "B" (Fig. 2).

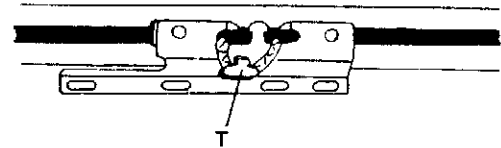
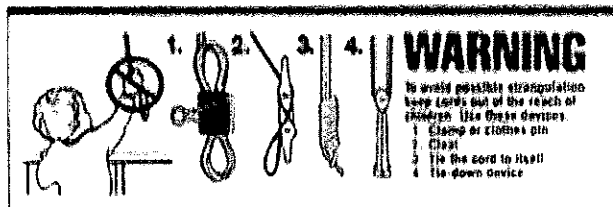


Fig. 5: LOCKING CORD



FIG. 6
ATTACHING
CORD DROPS

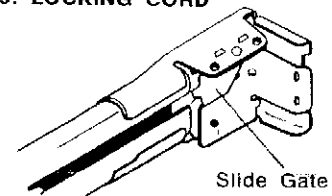


Fig. 7: REMOVING UNUSED SLIDES

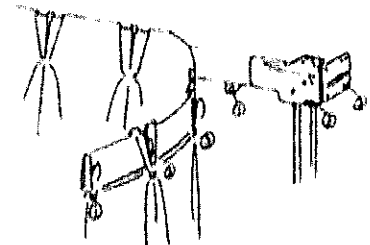


Fig. 8: HANGING DRAPERIES

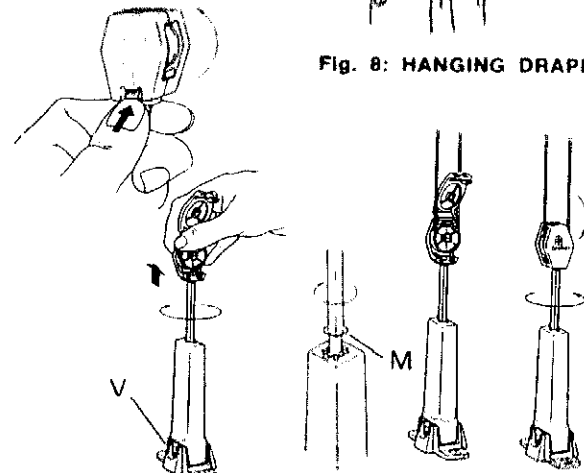


Fig. 9: INSTALLING CORD-TENSION PULLEY

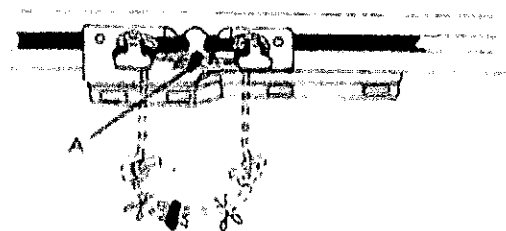


Fig. 10: TAKING UP CORD SLACK

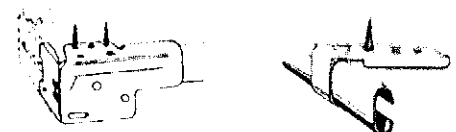


Fig. 11: MOUNTING ROD TO CEILING

Graber Industries, Inc., Middleton, WI 53562-1096

A Division of Springs Industries 

Form No. 5551x01

Printed in U.S.A.